



The iEQ45™ GoTo German Equatorial Mount # 8000

FEATURES

- Specialized astrophotography mount ideal for entry-level and intermediate astrophotographers
- Portable, compact, and sturdy German equatorial mount with the highest Payload/Mount ratio (1.7) in the category
- Payload: 45 lbs (exclude counterweight)
- Mount weight: 25 lbs
- Ultra-accurate tracking with temperature compensated crystal oscillator (TCXO)
- Gap-free structure for both R.A. and declination worms
- Resolution: 0.09 arc second
- #8406 controller with Advanced GoToNova™ GoTo Technology and heating mechanism
- Permanent periodic error correction (PEC)
- Built-in 32-channel GPS
- Integrated ST-4 autoguiding port capable of reverse guiding with auto-protection
- Calibrated polar scope with dark-field illumination and easy polar alignment procedure, allowing for fast and accurate polar alignment
- iOptron Port for electronic focuser, laser pointer, dorm control
- RS232 port for mount firmware upgrade and computer control via ASCOM platform
- RS485 new command set completely open for user-defined control of the mount
- Heated hand controller for low temperature operation as low as -20°C
- Fits with both Vixen and Losmandy-type mounting plates
- 2 inch heavy-duty stainless steel tripod
- Optional pier
- Comes standard with: Vixen and Losmandy-D saddles, 2 x 5kg counterweight, AC adaptor (100V-240V), 12V DC car plug adaptor, USB cable and RS232 Cable.

PACKAGE CONTENTS

- Telescope Mount (with built-in GPS)
- 3.5" Vixen type dovetail saddle (installed on the mount)
- 8" Losmandy-D type dovetail saddle
- #8406 Hand Controller
- 2-inch Tripod
- Two 5 kg Counterweight
- Controller Cable X 2
- Dark field illuminating LED with cable
- AC adaptor (100V-240V)
- 12V DC adaptor cable with car lighter plug
- USB cable
- RS232 cable
- 2mm, 5mm and 6mm hex keys

ONLINE CONTENTS *(click under "Support" menu)* www.iOptron.com

- Manuals *(you will need to refer to the full manual for details on set-up and operation).*
- Tips for set up
- Hand controller and mount firmware upgrades (check online for latest version)
- Reviews and feedback from other customers

Quick Setup

1. **Setup tripod:** Expand the tripod legs and lock the Tripod Support so that the tripod legs stay open (Figure 1). Adjust the tripod height by unlocking and re-locking the tripod legs to desired height. Position the tripod so that the Alignment Peg faces north. **(The Alignment Peg may be moved to the opposite position if used at latitude lower than 20° to avoid counterweights hit the tripod leg)**

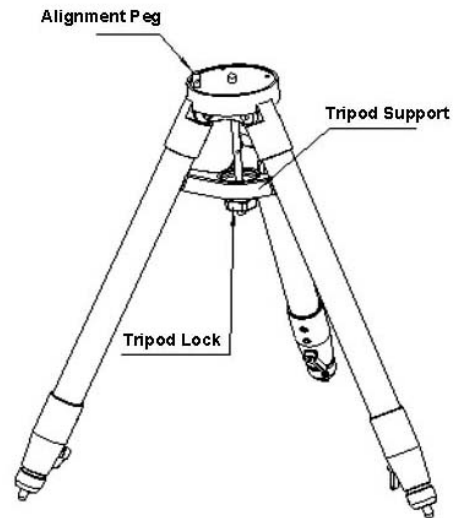


Figure 1

2. **Attach the EQ mount:** Retract the Azimuth Adjustment Knobs (next to the Bubble Level Indicator) to allow enough clearance for the Alignment Peg seating in the house. Unscrew 3 Azimuth Lock Screws (Figure 2). Put the mount onto the tripod head with bubble level on top of the Alignment Peg (Figure 3). Put the Teflon washer and three Azimuth Lock Screws back and tighten them. Level the tripod base by adjusting individual leg. You may use the build-in Bubble Level Indicator or an external torpedo level to check level.

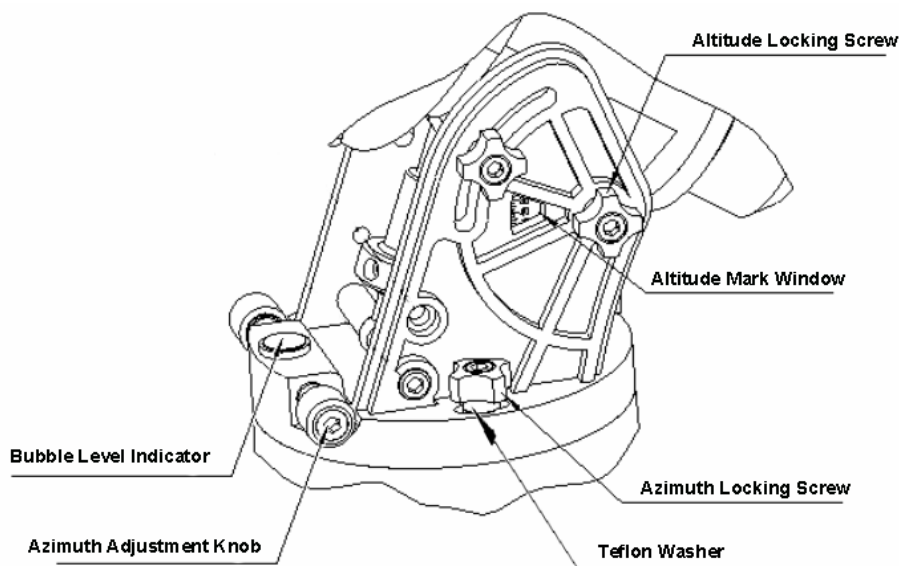


Figure 2

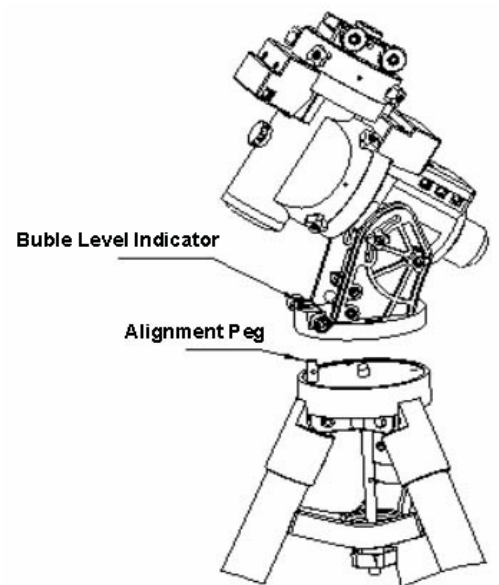


Figure 3

3. **Set the altitude:** Unlock four R.A. Clutch Screws and rotate the mount 180° around the R.A. axis (Figure 4) to move the dovetail face upside. Tighten the R.A. Clutch Screws. Un-screw the Altitude Adjustment Lever from Altitude Adjustment Knob (Figure 5). Turn the Altitude Adjustment Knob to set your current altitude, which is displayed in Altitude Mark Window. Using the Lever for a fine adjustment if needed. Always adjust the altitude without the load.

If your altitude is between 5° to 40°, set the Altitude Adjustment Knob to the lower position (factory default position, Figure 5). An Altitude Safety Block has to be installed (Figure 6. A hex key to release and secure the screw is included).

If your altitude is between 35° to 70°, take the Altitude Safety Block off. Set the Altitude Adjustment Knob to the upper position. You can change the position before attaching the mount to the tripod head.

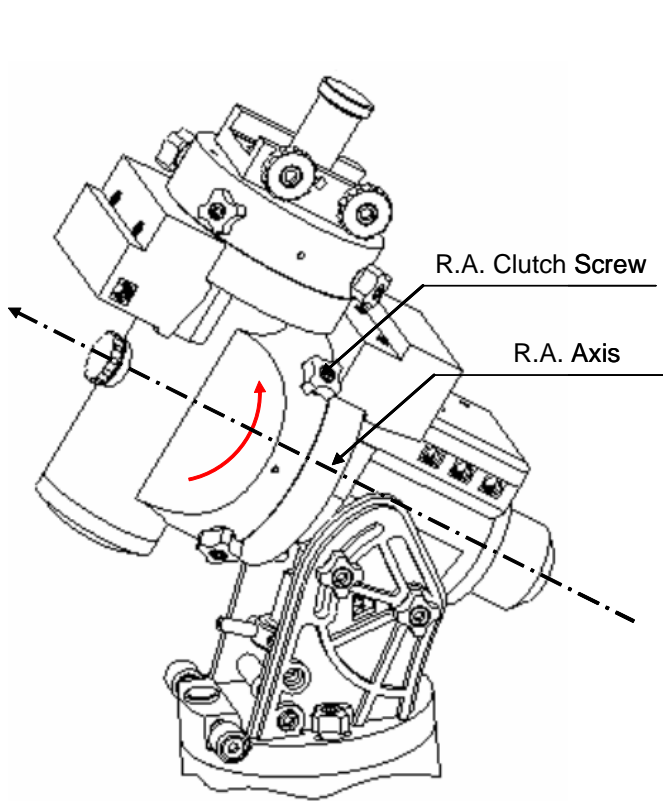


Figure 4

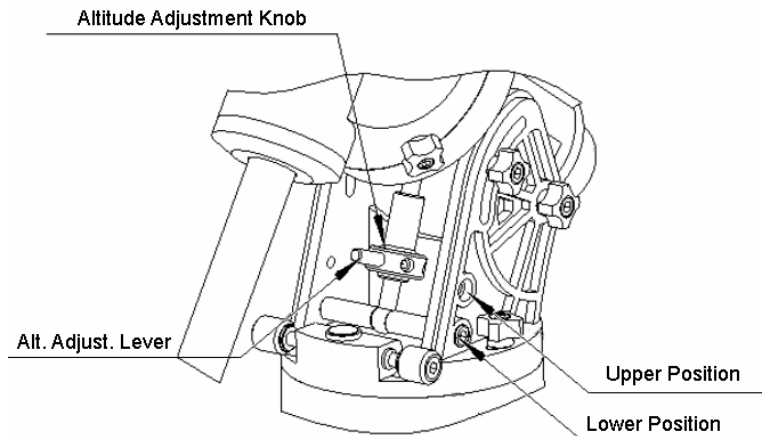


Figure 5

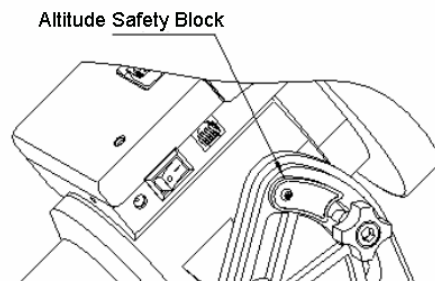


Figure 6

4. **Attach counterweight (CW) shaft:** Unscrew the CW shaft from the top of the mount (Figure 7 left) and thread it into the opening of the DEC axis (Figure 7 right).

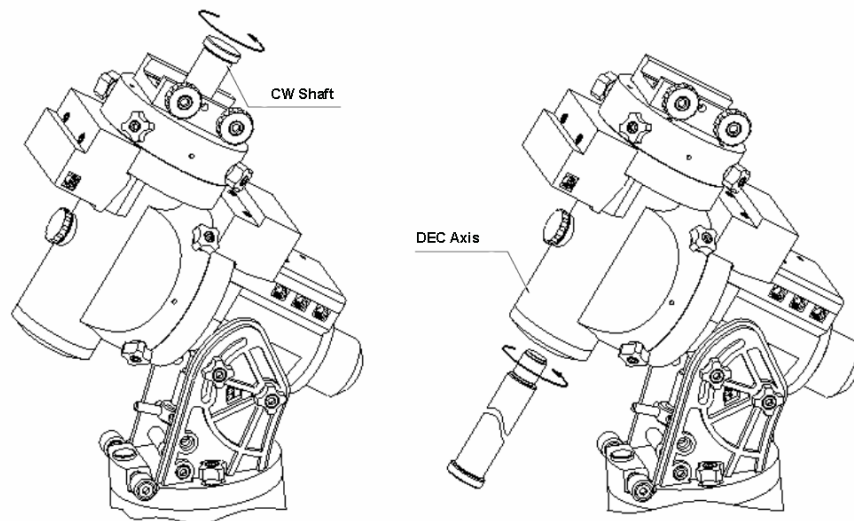


Figure 7

5. **Attach dovetail adapter:** Both Vixen and Losmandy-D dovetail saddles have been included for your convenience. A Vixen dovetail saddle has been installed. Two M6x14 hex head screws are used for the Vixen dovetail saddle. Six M6x14 screws are needed for Losmandy-D plate installation. Customer-made large adapter can also be installed.

6. **Install counterweight(s):** iEQ45 comes with two 5kg counterweights. Use just one or both of them for your particular OTA (Optical Tube Assembly). An optional CW shaft extension is available for purchase at www.ioptron.com.
7. **Attach OTA to mount and balance:** After attaching an OTA and accessories to the mount, the iEQ45 must be balanced to ensure minimum stress on the mount (such as gears and motors inside). There are four (4) Clutch Screws on both DEC and R.A. axes. Please refer to the full manual for balance procedures/tips.
8. **Connect cables:** Attach one end of a RJ-11 cable into the socket on the side of the DEC unit and the other end into the DEC socket located on RA unit. Using another RJ-11 cable to connect the hand controller to the HBX socket located on the RA unit. Plug 12V DC power supply into the POWER socket on RA unit. The red LED will be on when the power switch is turned on.
9. **Polar alignment:** In order for an equatorial mount to track properly, it has to be accurately polar aligned. With the proprietary Polar Scope and Quick Polar Alignment procedure, you can do a fast and accurate polar alignment.

Polar axis adjustment: Loosen three Azimuth Locking Screws, adjust the Azimuth Adjustment Knobs to do a fine adjustment of the mount in the azimuth direction. Tighten the locking screws to secure the mount. Loosen four Altitude Lock Screws on the side of the mount, turning the Altitude Adjustment Knob so that the altitude reading from the Altitude Mark Window equals to your local altitude. Use the Lever for a fine altitude adjustment. Retighten the locking lock screws.

Quick Polar Alignment:

- (1) Turn on the power to the mount by pressing the POWER button on R.A. unit. After GPS OK is shown on the upper right corner of the hand controller, the LCD will display the Polaris Position (as shown in Figure 9(a)). You also can show this chart by pressing MENU button, then select ALIGN and Polaris Position if you are practicing inside or when there is no GPS signal. For example, May 30, 2010, 20:00:00 at Boston, US (alt N42°30'32" and long W71°08'50"), 300 min behind UT, the Polaris Position are 1h26.8m and 41.5m.
(If you are located at south hemisphere, Sigma Octantis will be used as the reference for polar alignment.)
- (2) Take off the Polar Axis Cover and Polar Scope Cover;
- (3) Remove the protection tape on the thread-in hole located on the Polar Scope. Then thread the dark field illuminating LED end into the thread-in hole and plug the other end into the Reticule socket located on the RA unit. The illumination intensity can be adjusted using the HC via "**Set Eyepiece Light**" function under "**Set Up Controller**" menu;
- (4) Using UP or DOWN button to turn the DEC axis to unblock the Polar Scope view (there is a hole on the DEC axis);
- (5) Using LEFT or RIGHT button to turn the RA axis to rotate the Polar Scope dial to a clock position where 12 is at the top, as shown in Figure 8;

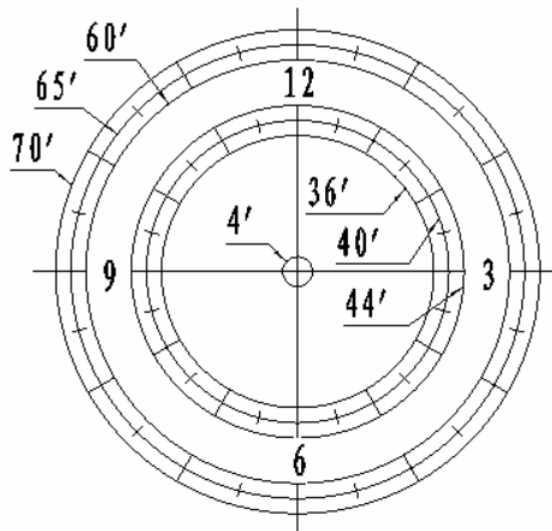


Figure 8

- (6) Follow Polar Axis Adjustment procedure to adjust the mount in altitude and azimuth directions and put the Polaris in same position on the Polar Scope Dial as indicated on the HC LCD, as shown in Figure 9 (b).

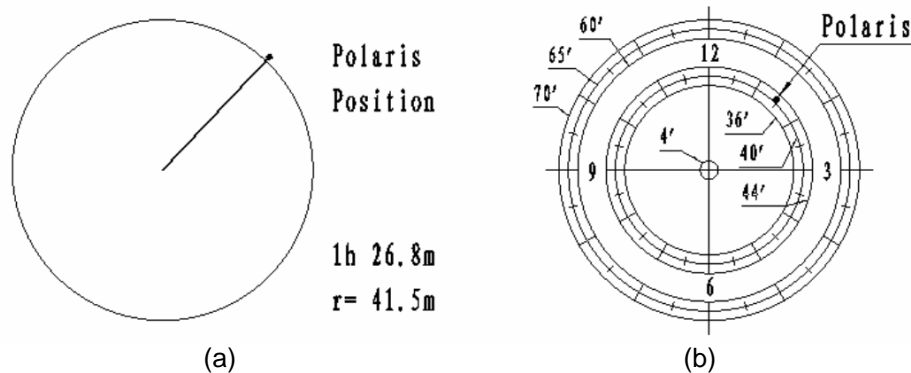


Figure 9

Adjust the mount to Zero Position: The Zero Position is the position where the counterweight shaft points to ground, telescope is at the highest position with its axis parallel to the polar axis and the telescope is pointing to the North Celestial Pole. Loosen and re-tighten all Clutch Screws on both DEC and R.A. axes to adjust the mount.

10. **Setup Controller:** Turn on the power. Wait for controller lights on. Press the MENU button. Move the cursor to “**Set up Controller**” and press ENTER. Select “**Set up Local Time**” and press ENTER. Enter the date and check if it is Daylight Saving Time using arrow keys and number keys. Press ENTER button when done. Go to “**Set Up Site**” and press ENTER. Enter your time zone (add or subtract 60 minutes per time zone) by entering minutes “behind” UT or “ahead of” UT, such as:

- Boston is 300 minutes “behind” UT
- Los Angeles is 480 minutes “behind” UT
- Rome is 60 minutes “ahead” of UT
- Sydney is 600 minutes “ahead” of UT



Go to “**Set N/S Hemisphere**” to select north or south hemisphere.



Figure 10

11. **Star Alignment:** Star alignment will improve the GOTO accuracy. From the main menu select “**Align**”. Select “**One Star Align**” and press ENTER. The screen will display “Adjust telescope to Zero Position.” Press ENTER. A list of align stars that are above the horizon is computed based on your local time and location. Select a star and press ENTER. Use arrow buttons to center the star in your eyepiece. Using number key to adjust the slew speed while centering the object. (1 for slowest, 9 for maximum). Press ENTER when finished. To increase the accuracy you may choose to do two star alignment. **Note: two star alignment should be performed after one star alignment.**
12. **Go to an Object:** The mount is now ready to GOTO and tracking targets. Press MENU button, select “**Select and Slew**” and press ENTER. Select a category (ex. “**planets, sun, moon**”). Then select an object (ex. “moon”). Then press ENTER. The telescope will automatically slew to the object and lock on. It will automatically begin to track once it locks on to the object.
13. **Sync to Target:** One can also use this function to center and synchronize the object from Step 12 to improve the local GOTO accuracy. This is more helpful if you are looking for some faint object near a bright star. A **Select and Slew** has to be performed before “**Sync to Target**” operation. Press MENU button and select “**Sync. To Target.**” Press ENTER. Next use the arrow keys to move object until it is centered in your eyepiece. Then press ENTER again on the hand controller. “**Sync to Target**” is similar to one star alignment.

iEQ45 Assembly Term

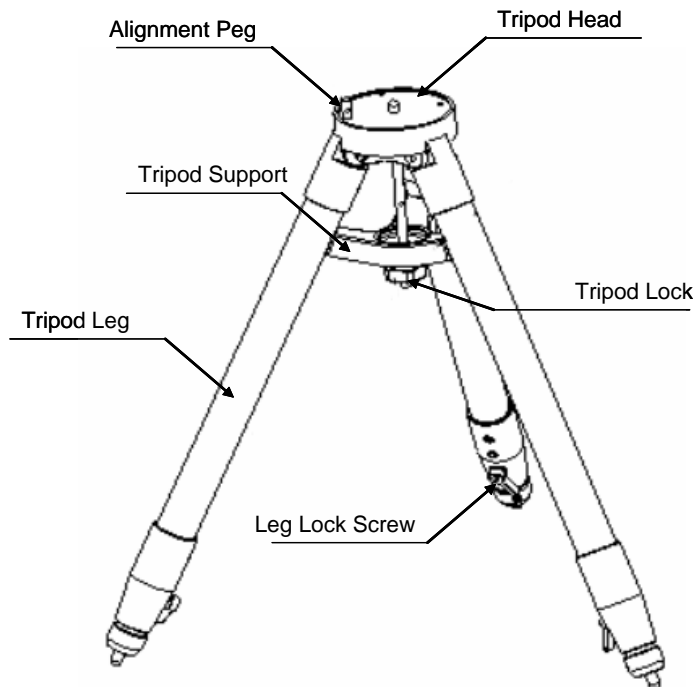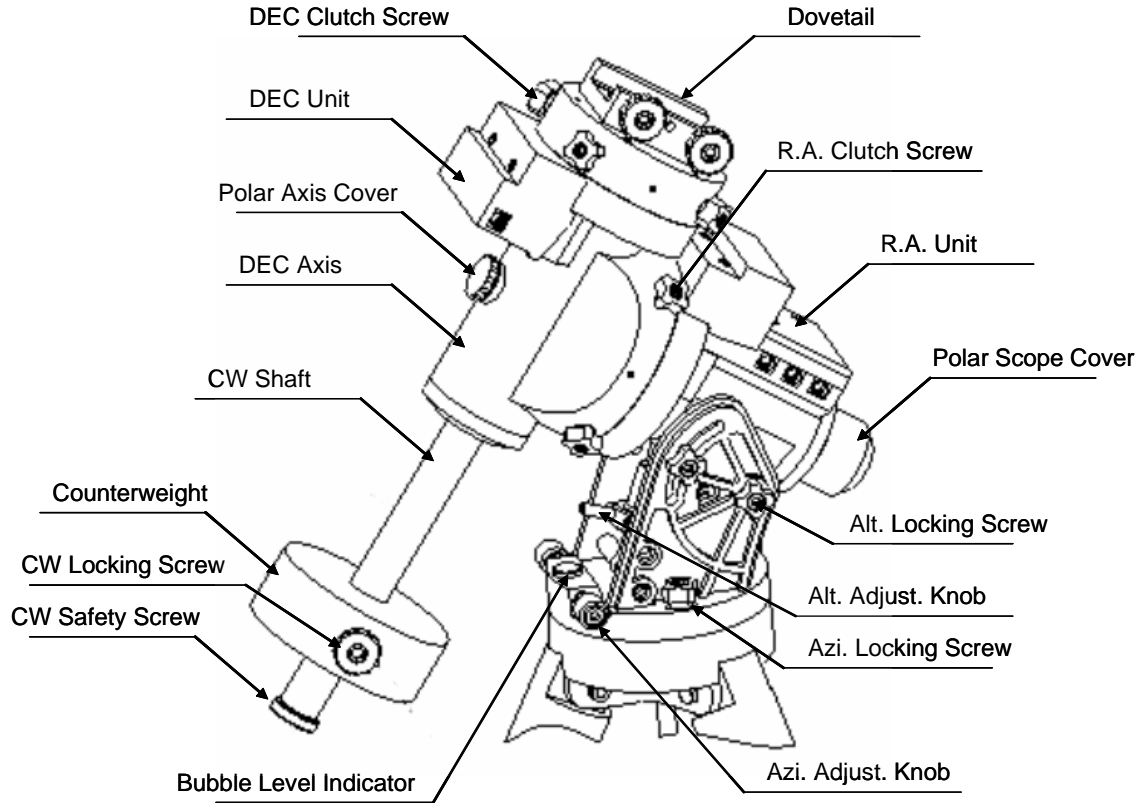

September 2010, V1.00